

Front Panel Button Shortcuts

To speed navigation the 7-Series has numerous navigation “shortcuts”. For combinations, hold down the first identified key and continue to hold while pressing the next keys.

Function	Key Sequence	Action
Record Tone	 + 	Record and Tone In the menu File: Marker Mode must be set to Markers Disabled. While recording hold the REC key and press the tone button. Tone will be active as long as the tone button is held.
Jam Menu	 + 	Menu and HDD Enters the time code jam menu. (702T & 744T Only)
Button Lock	 + 	Backlight and Tone Press backlight then tone to lock all front panel buttons except for Record, Stop and Play. FF and Rew are available in playback mode. Use backlight and tone again to unlock the panel.
Input Mutes		Input Hold down and press soft buttons to mute inputs
Input Routing	 + 	Stop and Input Hold Stop and press INPUT to cycle through input routing presets. Last preset will open the input routing menu to the custom route selection
Phantom #1	 + 	Tone and Menu Toggles Input 1 phantom power. Phantom 1 & 2 are linked when Inputs 1 & 2 are linked.
Phantom #2	 + 	Tone and HDD Toggles Input 2 phantom power
Low-cut #1	 + 	Backlight and Menu Toggles Input 1 high-pass filter. Low-cuts 1 & 2 are linked when Inputs 1 & 2 are linked.
Low-cut #2	 + 	Backlight and HDD Toggles Input 2 high-pass filter
Connect FireWire	 + 	Stop and HDD Initiates FireWire connection if previously disconnected via an “eject” command
Take Status Menu	 + 	Stop and Backlight Enters Take Status Menu. From this menu mark the last recorded take as Circled or No Good.
False Take	 + 	Stop and Rewind Delete last take prompt.
Increase Take	 + 	Stop and Fast Forward Increments take number to be recorded for next file
Take List	 + 	Stop and Play Take list and take status identifying screen
Toggle Drives		HDD Hold HDD button down for 1 second to toggle between viewable drives.
LED Level	 + Rotary Switch	Backlight and Rotary Switch Adjusts level of LED brightness.
Flashlight Mode	 +  + 	Rewind and Play and Stop With the power off, hold down these buttons while powering the unit to enter Flashlight mode. This illuminates all LEDs except for three. Press power again to exit.