


SENNHEISER eW100 WIRELESS SYSTEMS

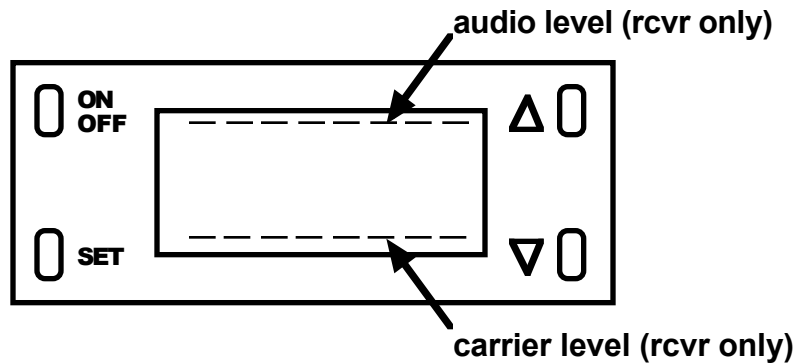

Menu Item		Transmitter	Receiver
Ch 5xx.xxx	selects channel OR displays frequency presets	Ch 001 - Ch 004 (freq) (freq)	Ch 001 - Ch 004 (freq) (freq)
SenSit	adjusts mic sensitivity	0 dB -10 dB -20 dB -30 dB	NA
SqELCH	reduces receiver output when transmitter signal is weak or transmitter is turned off	NA	0 dB to 30 dB in 5 dB increments
DISPL	toggles display	ChAnnL FrEqu	ChAnnL FrEqu
tunE	tunes the frequency of the currently selected channel	518.000 MHz to 550.000 MHz in .025 MHz increments	518.000 MHz to 550.000 MHz in .025 MHz increments
Loc	locks settings	on OFF	on OFF